
Pendulum Door Knocker

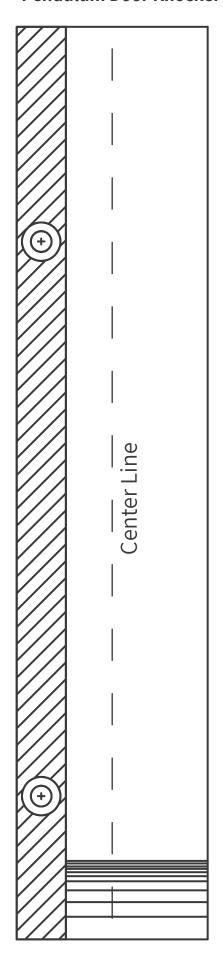


BEFORE YOU START

Thank you for purchasing the Pendulum/DK. Please read through all of the steps before you begin the installation process to ensure you understand the instructions and have the proper tools to proceed.

DESU DESIGN IS NOT RESPONSIBLE FOR ANY DAMAGES DUE TO IMPROPER INSTALLATION

PARTS LIST

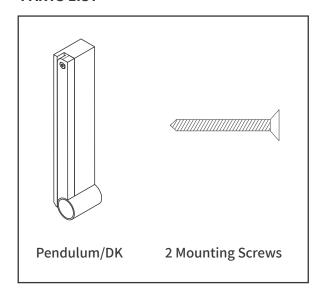

INSTALLATION INSTRUCTIONS

The Pendulum/DK mounts with two screws (provided). Contact your local hardware store for assistance mounting to your particular door, as materials can vary. The door knocker is made to accept #8 flat head screws. Pre-drill mounting holes with a #29 drill bit (0.136"). Drill template provided.

DESU DESIGN

PO BOX 225 BONDVILLE, VT 05340

T 718.384.7306 E INFO@DESUDESIGN.COM